

1997 MITSUBISHI 3000GT V6-3.0L SOHC

TABLE OF CONTENTS

ENGINE

ENGINE CONTROLS	2
ENGINE CONTROLS	3
ENGINE CONTROLS	4
STARTING/CHARGING - CHARGING CIRCUIT	5
STARTING/CHARGING - STARTING CIRCUIT (A/T W/ANTI-THEFT)	6
STARTING/CHARGING - STARTING CIRCUIT (M/T W/ ANTI-THEFT)	7
STARTING/CHARGING - STARTING CIRCUIT (W/O ANTI-THEFT)	8

ELECTRICAL & POWER CONTROL

BODY COMPUTER - W/ANTI-THEFT	9
BODY COMPUTER - W/O ANTI-THEFT	10
INFORMATION BUS - COMPUTER DATA LINES	11

DRIVER CONTROLS

CRUISE CONTROL - A/T	12
CRUISE CONTROL - M/T	13
DEFOGGER	14
EXTERIOR LIGHTS - BACK-UP LAMPS CIRCUIT	15
EXTERIOR LIGHTS - EXTERIOR LAMPS CIRCUIT	16
HEADLIGHTS	17
HORNS - W/ANTI-THEFT	18
HORNS - W/O ANTI-THEFT	19
INSTRUMENT CLUSTER - AUXILIARY GAUGES CIRCUIT	20
INSTRUMENT CLUSTER - INSTRUMENT CLUSTER CIRCUIT	21
INSTRUMENT CLUSTER - INSTRUMENT CLUSTER CIRCUIT	22
INTERIOR LIGHTS - COURTESY LAMPS CIRCUIT (CONVERTIBLE)	23
INTERIOR LIGHTS - COURTESY LAMPS CIRCUIT (HATCHBACK)	24
INTERIOR LIGHTS - INSTRUMENT ILLUMINATION CIRCUIT	25
MIRRORS	26

RESTRAINTS

PASSIVE RESTRAINTS - ELECTRIC TENSION REDUCER CIRCUIT	27
POWER WINDOWS	28
SUPPLEMENTAL RESTRAINTS	29
SOUND SYSTEMS - CONVERTIBLE	30

RADIO, STEREO, AND COMPACT DIS

SOUND SYSTEMS - HATCHBACK W/ AMPLIFIER	31
SOUND SYSTEMS - HATCHBACK W/O AMPLIFIER	32

TRANSMISSION AND DRIVERTRAIN

TRANSMISSIONS - A/T CIRCUIT	33
-----------------------------------	----

TRACTION CONTROL SYSTEMS

ANTI-LOCK BRAKES	34
------------------------	----

VENTILATION, HEATER & AIR CONDITIONER

AIR CONDITIONING - MANUAL A/C CIRCUIT	35
AIR CONDITIONING - MANUAL A/C CIRCUIT	36


SENSOR AND SWITCHES

ENGINE COOLANT TEMPERATURE SENSOR	37
CAMSHAFT POSITION SENSOR	38
COMBINATION METER	39
CRANKSHAFT POSITION SENSOR	40
HEATED OXYGEN SENSOR	41
IGNITION COIL	42
IGNITION SWITCH	43
INJECTOR	44
INTAKE AIR TEMPERATURE SENSOR	45
KNOCK SENSOR	46
MANIFOLD DIFFERENTIAL PRESSURE SENSOR	47
THROTTLE POSITION SENSOR	48
VOLUME AIR FLOW SENSOR	49
PIN-OUT ENGINE CONTROL MODULE	50
PIN-OUT ENGINE CONTROL MODULE	51
PIN-OUT ENGINE CONTROL MODULE	52
PIN-OUT ENGINE CONTROL MODULE	53
PIN-OUT ENGINE CONTROL MODULE	54
FUSES AND FUSABLE LINKS AND IOD OR STORAGE CONNECTOR	55
MULTI-PURPOSE FUSES (IN JUNCTION BLOCK)	56
DEDICATED FUSE (ENGINE COMPARTMENT)	57
JUNCTION BLOCK	58
JUNCTION BLOCK	59

GLOSSARY

GLOSSARY OF TERMS	60
GLOSSARY OF TERMS	61

2000 PONTIAC VECTRA ENGINE WIRING

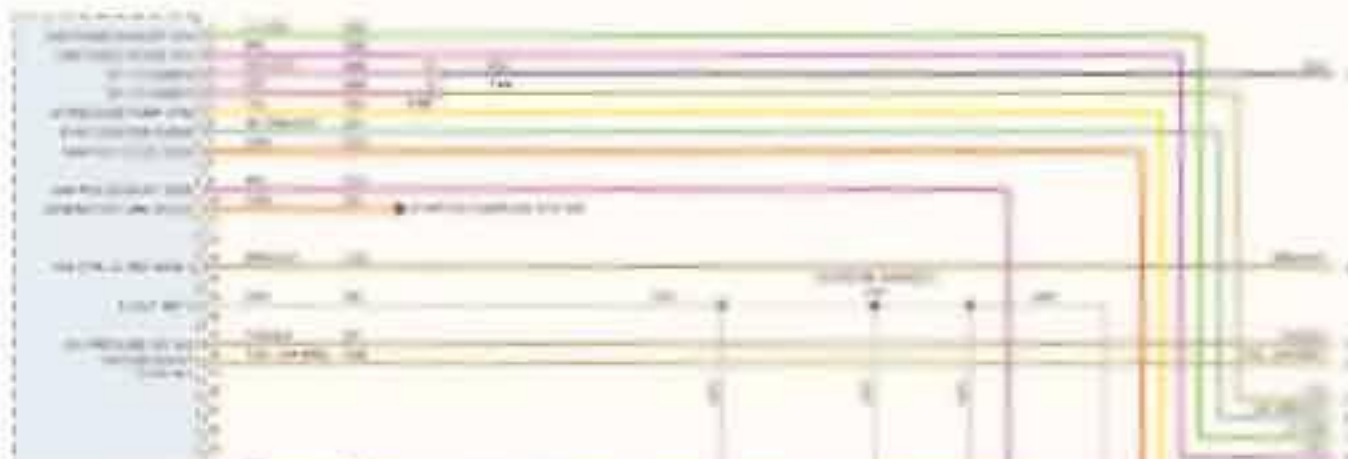

ADQUIERE LA VERSIÓN COMPLETA EN
diagramaselectricos.net

